

How To Cast Your Vote


With

MicroVote Infinity

1. The Election Official inserts the *Voting Card*, and selects the Ballot Style for the Voter.

Note: you will first see a voter control page where you can adjust contrast, size and language. Please move passed this page by pressing the **NEXT PAGE** button unless you are having trouble reading or seeing the screen.

2. Push the button next to the candidate of your choice. An "X" will appear in the box next to the candidate's name. If you wish to change your choice press the button again, and it will cancel your selection. You may then continue voting.

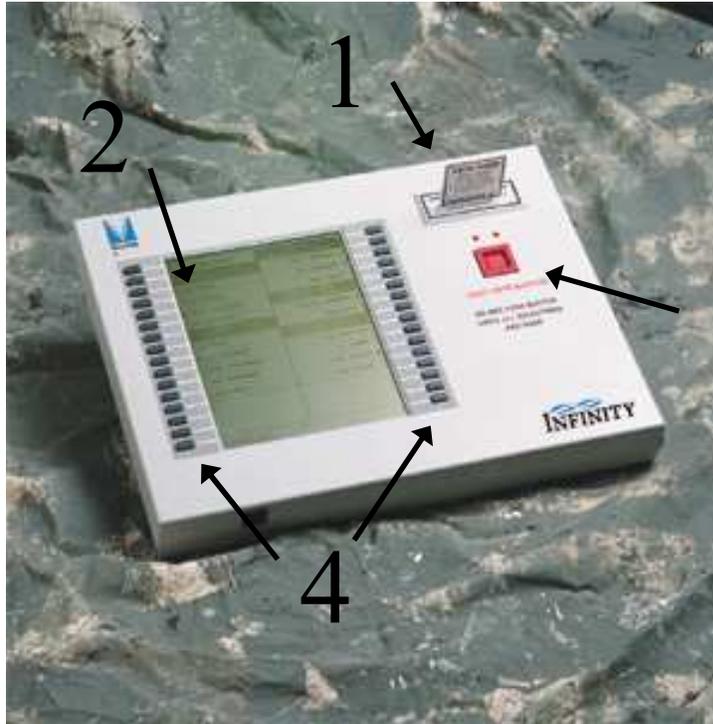

3. Press **NEXT PAGE** to Advance the ballot and **PREVIOUS PAGE** to go back to Review your ballot. These are the bottom Left and Right buttons.

NOTE: You must view all pages of the ballot and select **CONFIRM VOTE** before being able to press the **Cast Vote** button.

4. If you wish to cast a *Write-In* Vote, press the *Write-In* button in the office you are voting for. The *Write-In* screen will appear. Push the buttons next to the desired letters to spell the candidate's name. This name will appear on the center of the screen. Use the **SPACE** or **ERASE** button to advance or re-type the candidate's name. Press the **DONE** button at the bottom right to Accept and return to the ballot.

5. When your selections are final, move to the **CONFIRM VOTE** page at the end of the ballot. You must select the **CONFIRM VOTE** option before the *Cast Vote Button* will be lit. Press the *Cast Vote Button* and it will notify you that your vote has been successfully recorded